

INCLUDES THE FOLLOWING MODELS:

HD06
HD07
HD08

BEFORE USING YOUR ICE AUGER REMEMBER:

1. Always leave your blade protector on when not using your Eskimo hand auger. The blades are sharp and can cause injury if proper precautions are not taken.
2. Be extremely careful when using your auger in shallow waters, as a rocky water bottom can damage your blades and the auger if they come in contact.
3. Never try to adjust the cutting angles of your auger blades, especially by bending them. The angles are specifically engineered and critical to the auger's performance.
4. Always start a new ice hole instead of reopening an old one with your ice auger. The sides of an old ice hole often freeze, shrinking the hole's diameter. This can cause your auger to jam. Using your ice auger in these conditions can damage the auger and blades.
5. When using your ice auger, remember that the under-surface of ice is often uneven. This can cause your auger to become jammed as you break through the ice. If you find yourself in this situation, do not force your auger. Lift it approximately 1" and make several half turns, lowering the drill 1/4" each turn until a clean hole is cut.
6. Never hit your auger on the ice when trying to start a hole, as this can bend your auger and damage the blades. Lower your auger gently when starting to drill.


ASSEMBLY

To assemble your Eskimo® hand auger, insert the pommel handlebar assembly into the auger weldment. The handle can be adjusted to three different lengths (49", 53.5" or 58") by aligning the appropriate hole on the handle bar with the hole in the auger weldment. To secure the handle in place, insert the wing bolt and tighten.

SHARPENING

Sharp blades make cutting through ice easier. If your blades becomes dull, a new set of blades can be ordered from Eskimo®. Contact customer service at 1-800-345-6007 for more information. Replacement parts also can be found by visiting our website at www.geteskimo.com.

PARTS BREAKDOWN AND REPLACEMENT PARTS

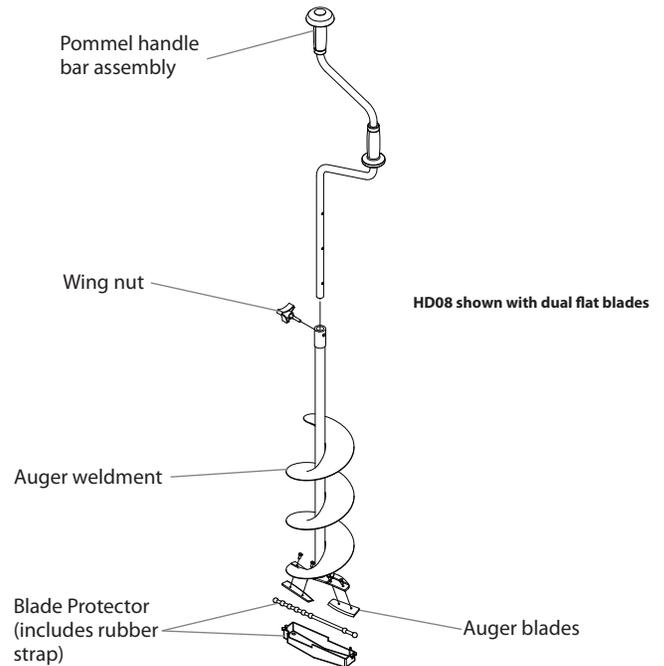

PART NO.	DESCRIPTION
252V	HAND AUGER HANDLE WITH POMMEL
1018V	HAND AUGER HANDLE POMMEL
63285	WING BOLT, HAND AUGER
303A	BLADE PROTECTOR (FOR HD06)
304	BLADE PROTECTOR (FOR HD07 AND HD08)
RB6	HAND AUGER BLADES 6"
RB7	HAND AUGER BLADES 7"
RB8	HAND AUGER BLADES 8"

ONE-YEAR LIMITED WARRANTY

Ardisam, Inc., warrants this Eskimo® hand auger under a one-year limited warranty to be free from defects in materials or workmanship or both for a period not exceeding twelve consecutive months from the date of original purchase by the first retail consumer or commercial end user. "Consumer use" means personal recreational use by a retail consumer. "Commercial use" or "commercial application" means all other uses, including use for commercial, income producing or rental purposes. Once a product has experienced commercial use, it shall thereafter be considered as a commercial product for purposes of this warranty. This warranty applies to the original owner that provides a proof of purchase. The warranty is not transferable. The warranty period begins on the date of purchase by the first retail consumer or commercial end user, and continues for the twelve month consecutive period thereafter. Any unit used in a commercial application is covered for a period of 90 days after purchase. **For the warranty to be valid, the product must be registered online at www.GetEskimo.com, or the warranty card must be filled out and received by Ardisam, Inc., within 30 days of purchase.** Ardisam, Inc. shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada.

**This warranty applies only to products which have not been subjected to negligent use, misuse, uses other than those indicated in the product's owner's manual, alteration, accident, use of unauthorized parts, failure to perform periodic maintenance as specified in product's owner's manual, normal wear and tear, use of unauthorized parts or repairs performed at non-authorized service centers. There is no other expressed warranty. Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one year from purchase, or to the extent permitted by law. All other implied warranties are excluded. Liability for incidental or consequential damages are excluded to the extent exclusion is permitted by law. Ardisam, Inc. does not assume, and does not authorize any other person to assume for us, any liability in connection with the sale of our products. To obtain warranty service, you must have prior approval by calling our customer service department at 1-800-345-6007. If you choose to ship your product to Ardisam for warranty repair, you must first have prior approval from Ardisam by calling our customer service department for a return material authorization number (RMA#). Under these circumstances, all items must be shipped prepaid. Ardisam will at no charge, repair or replace, at their discretion, any defective part which satisfies all conditions stated above. Ardisam retains the right to change models, specifications and price without notice. Ardisam, Inc. shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada.*

Check for parts online at www.GetEskimo.com or call **800-345-6007** M-F 8-5 CT